


USERS MANUAL Visual VR2

Safety measures.....	2
Precautions & warnings on safety and health.....	4
Children experiencing virtual reality.....	6
Proper environment for using Visual VR2.....	7
Package contents.....	8
Prior using Visual VR2.....	9
Adjustment and focus.....	14
The three steps.....	15

Safety measures

ATTENTION! Read carefully the instructions written below and apply them accordingly

- ✓ Read carefully the manual prior using Visual VR2
- ✓ Use Visual VR2 only on their intended purpose, otherwise you can injure yourself
- ✓ The device can function ONLY if it has attached a mobile phone with the display between 4'-6,5' and gyro sensor
- ✓ To view the updated list with all compatible ALLVIEW model, please visit www.allview.ro/visualvr or www.allview.com/visualvr
- ✓ For a satisfactory compatibility with Visual VR2, make sure the mobile is updates and runs with the latest soft version

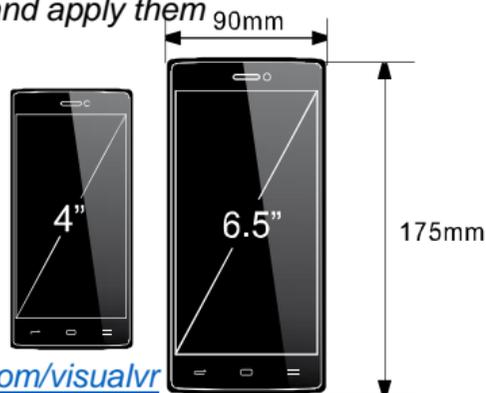

- Warning: --- Situations that could cause injury to yourself or others*
- Attention --- Situations that could damage the device or other equipment*
- Note --- Notes, tips and tricks*


Our company reserves the right to make changes in the content of the manual without making this public. These changes will be posted on the company's website at product changes are made . Web manual content may be different from those existing in the product , and the latter will be considered the true and updated

Precautions & warnings on safety and health

NOTE. Carefully read all the instructions and implement adjustments and use of the device Visual VR2 for the overall security and comfort conditions

- ✓ If you wear glasses , do not use Visual carriage VR2 over them. It is recommended replacing spectacles with lenses.
- ✓ If you suffer from heart problems , phobias (eg acrophobia , airfobia, nyctofobia, polifobia etc.) or other medical condition, please consult your doctor before using Visual VR2.
- ✓ If you are pregnant , you are at a certain age or you present binocular vision abnormalities(eg, decreased vision) please consult a physician before using the device
- ✓ If you have or have had a history of seizures, episodes of seizure and/or blackouts please ask your doctor before using the device.
- ✓ For any state / anomaly felt, no matter how minor , incompatible with comfort , immediately discontinue use Visual VR2 .
- ✓ Like pitch / roll post- landing symptoms, virtual reality can cause similar effects (eg upper abdomen discomfort , nausea , dizziness , flatulence , paleness, cold sweats , vomiting , hyperventilation), felt for some while.

- ✓ Avoid any activity that requires balance , coordination, high working capacity (eg driving , handling tools/equipment , engaging in activities requiring increased visual acuity and attention ditributor high)
- ✓ Where do not comply with this indication, you can damage yourself phisically or those around you, resulting in possible incidents with wounded or even death.
- ✓ Due to the fact that the device can be used in virtual reality and reacts to the movements of the head, to a prolonged use, there may be some muscle aches, headache, numbness, tingling
- ✓ Do not resume use until all the above mentioned effects have disappeared .

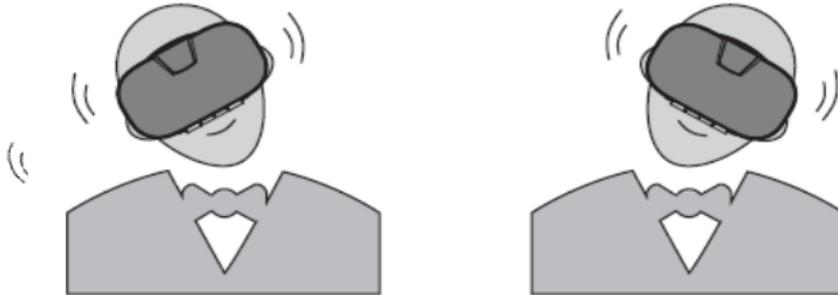

You will be able to move around within virtual reality by simply shaking your head and using the gyro sensor from your phone

Children experiencing virtual reality:

- NOT intended for use by children under 13
- Monitor your children closely when using Visual VR2 , especially at first contact and first experiences with virtual reality
- In the event of an anomaly , no matter how minor , stop the action and go to the doctor
- Limit the time of use of Visual VR2
- Extended virtual reality Experimentation, particularly in children, can lead to decreased hand-eye coordination and a negative impact of balance and ability to work and concentration, and Visual acuității impairment

Tips and tricks

- ✓ Începeți folosirea Virtual VR2 treptat, pentru a permite corpului dvs. o adaptare graduală și în siguranță la realitatea virtuală.
- ✓ Faceți pauze de 10-15 minute la fiecare 30 de minute de utilizare.
- ✓ Obisnuiți-vă gradual cu mișcările necesare deplasării în realitatea virtuală și nu faceți mișcări bruște la primele utilizări ale dispozitivului.
- ✓ Pentru o experiență satisfăcătoare și confortabilă, evitați utilizarea Visual VR2 în cazul în care: sunteți obosit, mahmur, nervos, anxios, aveți nevoie acută de odihnă, sau suferiți de probleme digestive sau dureri de cap
- ✓ Excesul poate provoca dureri temporare; în caz de persistare, consultați medicul;

Proper environment for using Visual VR2

Visual VR2 gives you a virtual reality experience .

- ✓ Virtual reality can simulate physical presence in real world places (museums , city tours , etc.) or imaginary worlds (games, movies) . Virtual reality offers unique experiences through VR applications , designed for different uses. Even in the middle of the house you will be able to travel on the African savannah or you can visit famous museums , furthermore , you can enjoy all the adrenaline offered an amusement park .
- ✓ Ensure that you are in a safe environment , away from people, objects (large, sharp , unstable etc.) , away from open windows , balconies , stairs , etc.

Being an intense experience and unintentional transposition in a surreal environment , we strongly recommend to always stay seated during the use of Visual VR2 .

IT'S STRICTLY FORBIDDEN TO USE THE DEVICE WHILE DRIVING

Do not use Visual VR2 while you are in a moving vehicle, as it can produce adverse effects caused by real environment during virtual reality

Package content

Check your product box for the following items :

- Visual VR2 , head-straps and user manual

Articles found in the box are designed EXCLUSIVELY for Visual VR2 and may be incompatible with other devices.

- Use only accessories provided by Visual Fan which have been tested and approved in advance.Failure to do this may cause malfunction or functionality issues .
- Using Visual VR2 with devices other than those recommended may wave the warranty .


DO NOT LEAVE THE DEVICE IN DIRECT SUNLIGHT; DISREGARD OF THIS INDICATION CAN LEAD TO FIRE AND/OR DAMAGE THE DEVICE/MOBILE PHONE

Prior using Visual VR2


To be used effectively and without unwanted side effects, we strongly recommend you to follow exactly the steps listed below:

Preparation of Visual VR2 usage:

1. After opening the purchased package, make sure that all articles there are in the box above
2. Carefully remove the protective covers on the front cover and on the lenses inside.
3. Place Visual VR lens pointing your nose and cut-out at the bottom .
(informative image)

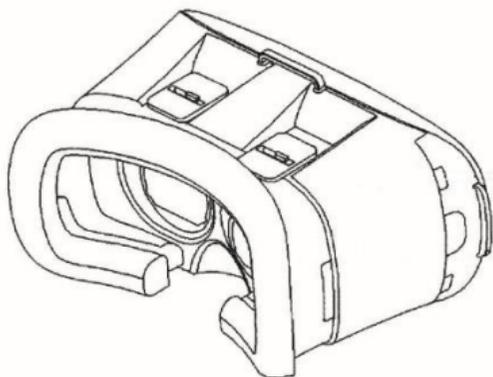




9

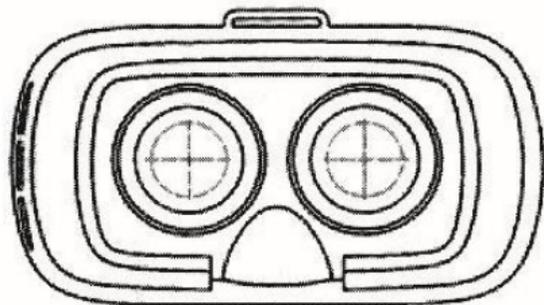

4. Place your device on your head and adjust the head-straps so that they don't feel




- too loose
- too tight
- they will fall
- there is no reason of inconvenience

After fixation, place the device down to continue his preparation for use.

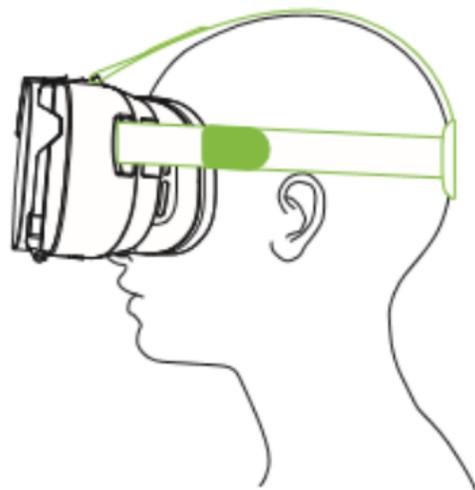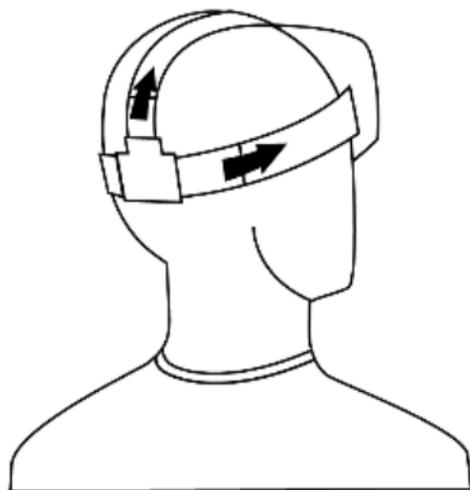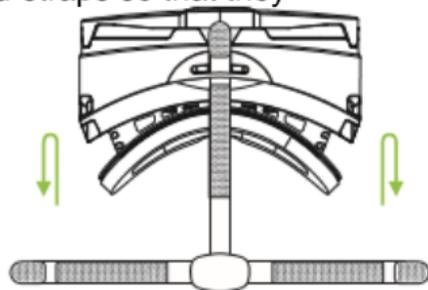


5. Open the hinged panel which will serve as mobile phone holder; insert your mobile horizontally, with the display oriented towards the inside of the device and the back of it supported by the hinged panel


Direcție fixare
telefon mobil

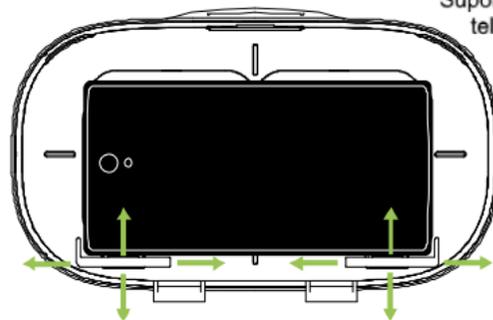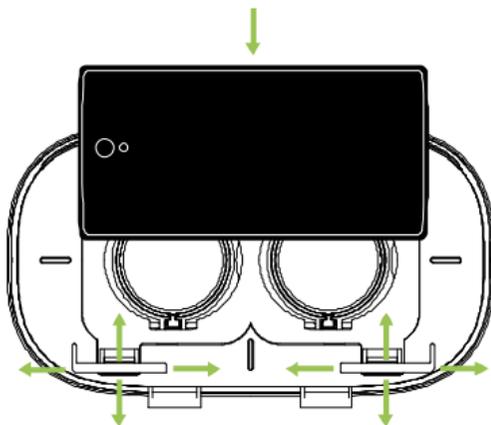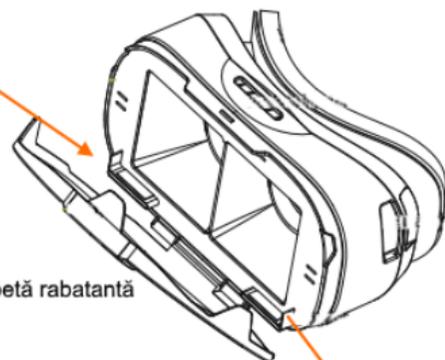


6. Once attached to the phone, you can close the choke, and then make sure that the phone is positioned correctly, as shown in the image below

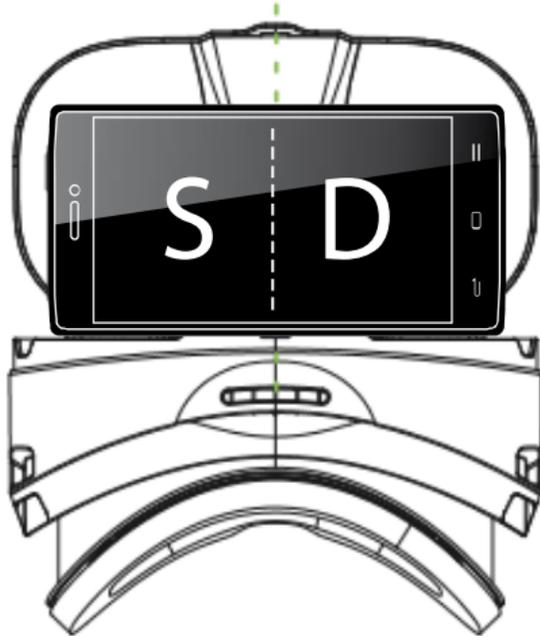

7. For a more intense gaming experience were commend using additional device for virtual reality 3D

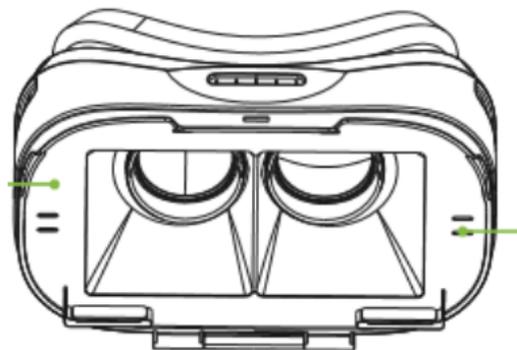


1

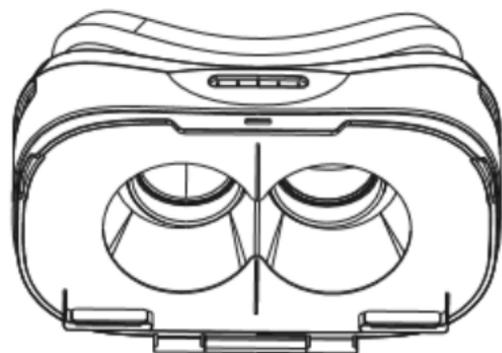

2

3

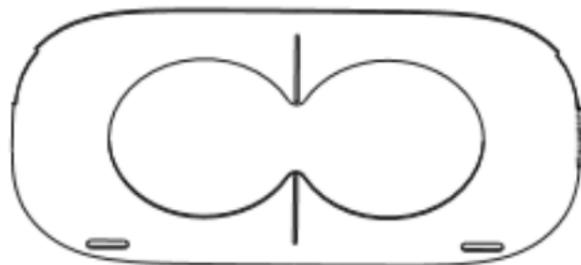


Scut anti-flash-uri

Adjustment and focus

The principle of operation is like the binoculars


- ✓ After you have positioned the device comfortable on y can adjust individually to each eye, depending on the visual acuity of possession, focusing effective
- ✓ At the top of the device you will find two adjustments, on the left, one for the left eye and one on the right, for right eye
- ✓ Adjustment is achieved by dragging the left-right up to match exactly to individual focus of the eye
- ✓ If short-sightedness, you can adjust the distance including inter-pupillary by turning individual lenses

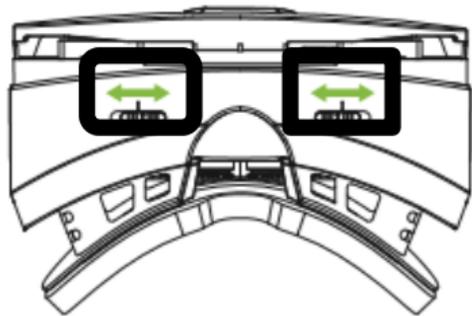


DON'T SKIP THE STAGE OF ADJUSTMENT OF LENSES AND FOCUS; OTHERWISE ITMAY LEAD TO A HIGH DEGREE OF DISCOMFORT

Three simple steps for experimenting virtual reality with Visual VR2


1. Go to store applications and download desired application

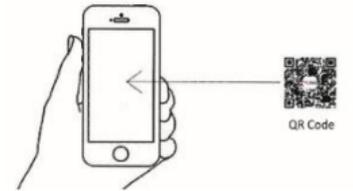

2. For a complete experience, applications must be designed for the VR format
Make sure that the screen is divided exactly in half

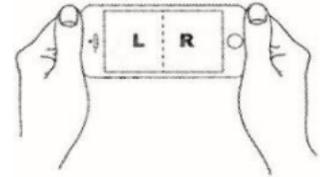

3. Install the application correctly, prior to use, in accordance with the relevant instructions.

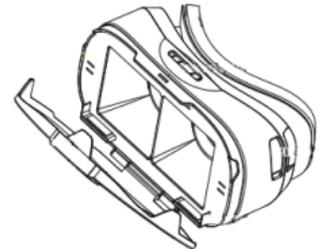

DECLARATION OF CONFORMITY

Nr.1415

We, S.C. Visual Fan it, an S.R. in Brasov, str. No. 61 Trees, CP 500,313, Romania, registered at reg. com. Brasov under no. J08/818/2002, CUI RO14724950, as an importer, we provide, guarantee and declare on their own responsibility, in accordance with the provisions of art. 4 HG 1.022/2002 relating to the products and services that can put in danger the life and health, safety and labor protection, the ALLVIEW, ALLVIEW brand VISUAL VR2 does not endanger the life, health, safety at work, does not produce negative impact on the environment and is in accordance with: The provisions of directives 89/686/EC, 93/68/EEC93/95/EEC relating to the products and services which are likely to endanger the life, health,.

Conformity assessment procedure has been carried out in accordance with the provisions in force.

Corresponding to the essential requirements and other relevant requirements of the Directive 89/686/EC, 93/68/EEC93/95/UREEC.si standards EN1836:2005 + A1:2007; EN166, the product is in compliance with the standard. The product has the CE marking. The Declaration of conformity is available at the address www.allviewmobile.com

Brasov
16.04.2016

Director
Cotuna Gheorghe



Basic information:

- ✓ Material: Environmentally Friendly ABS
- ✓ Weight: 263g
- ✓ Size: 194x117x127mm
- ✓ Architrave sponge
- ✓ Suitable size: 4.0"-6.5" display smartphones
- ✓ Aspheric optical lens design
- ✓ Three-end headband: Polyester + leather
- ✓ Transparent Cover: Environmental protection polycarbonate, high gloss transparent, enhanced virtual reality effect
- ✓ Media player - Support 3D left-right split screen video playback
- ✓ Best configuration: 5.5", resolution 1080P and
- ✓ Minimum configuration for smartphone:
- ✓ 4 core
- ✓ 1GB RAM
- ✓ Gyroscope
- ✓ Android 4.0 or higher

Health and Safety warning!

Read and follow all warnings and instructions included in User Manual or on www.allviewmobile.com!